

Tones Chart	
Symptom	Possible Cause/Solution
Busy Tones	You cannot transmit because all channels are busy, release PTT and wait for call-back.
Three short high pitched tones	Talk Permit. You can now continue with your requested transmission.
Continuous low-pitched tone when pressing the PTT button	Indicates you are out of range, or system is out of service, or the channel is busy with Smart PTT enabled.

#### To Turn Scan On/Off

1. Press the 4-Way Navigation button until **SCAN** appears.
2. Press and release the button below SCAN to start scanning.
3. The Scan indicator (  ) lights and a list of talkgroups/channels are scanned for activity.
4. To turn off scan, press the button below SCAN again to turn scan off. The scan indicator disappears.

#### Nuisance Delete

Temporarily delete a talkgroup/channel from scan list. When the radio is locked onto the talkgroup/ channel to be deleted:

1. Press the Menu Select button directly below **NUIS**.
2. Press the Menu Select button directly below **DELETE**.

#### Restoring a Nuisance Channel/Talkgroup

Turn Scan off and then on, turn radio off and then on, or change modes.

#### Scan List Program

##### *To add a talkgroup/ channel:*

1. Press the 4-way Navigation button until **SCAN** is displayed.
2. Press and hold the button below **SCAN** Indicator  flashes, indicating the Program/View mode. You will also see *SEL, DEL, and RCL* displayed as possible choices.
3. Press either side of the 4-way navigation button to scroll through the available zones and/or turn the talkgroup/channel select knob to scroll through the talkgroups/channels within each zone.
4. When you reach a talkgroup/channel that you wish to add to the scan list, press the button below SEL to add the talkgroup/channel to the scan list.  
*The scan indicator (  ) is displayed indicating that the talkgroup/channel is a member of the scan list.*
5. Press the HOME button to exit scan list programming and return to normal operation.

##### *To delete a talkgroup/channel:*

1. Press and hold the softkey below **SCAN**.
2. Repeatedly press the button below RCL to scroll through the scan list members.
3. When you reach a talkgroup/channel that you wish to delete from the scan list, press the button below DEL to delete the talkgroup/channel from the scan list.
4. *The scan indicator  disappears indicating that the talkgroup/channel is no longer a member of the scan list.*
5. Press the HOME button to exit scan list programming and return to normal operation.



#### **APX6500 Model 05**



## Quick Reference Card

# APX6500 Model O5



<u>Menu Select Items</u>				
Nuis	Prfl	Zone	Scan	ScnL
Mute	Info	Rcnt	Colr	Cnts
Myid				

## Turn Radio On/Off

1. Press the Power button on the control unit once to turn it on.
2. Press the Power button again to turn the unit off.

## Volume Set

1. Rotate the Volume Control Knob clockwise to increase volume, counterclockwise to decrease volume.

## Select a Zone and a Talkgroup/Channel

### To Select a Zone:

1. Press the left or right side of the 4-Way Navigation button until **ZONE** appears on the display.
2. Press the softkey below **ZONE**.  
*The current zone name flashes on the display.*
3. Press the 4-Way Navigation keys until the desired zone name appears on the display.

### To Select a Talkgroup/Channel:

4. To select a talkgroup/channel, turn the Channel Knob until the desired talkgroup/channel name is displayed.
5. Press the PTT button to begin transmitting on the displayed zone and talkgroup/channel.

## Select the HOME Talkgroup/Channel

Press and hold the HOME Button.

## Emergency – Trunked Feature

1. With the radio turned on, press the emergency button.

*The LED lights solid red, the display alternates between showing “EMERGENCY” and the current trunked zone and talkgroup/channel, and a short, medium-pitched emergency tone sounds.*

2. Press the PTT button and announce your emergency.
3. Release the PTT button to end the transmission and wait for a response from the dispatcher.
4. **To exit emergency:** Press and hold the Emergency button for about one second.

**The radio user should NEVER clear the emergency on their radio without being instructed to do so by dispatch.**

## Display Intensity

To adjust the display brightness, press the Dim button until the desired intensity is displayed.

## Changing Background Colors –

1. Press 4-Way Navigation button until **COLR** is displayed.
2. Press the menu select button below **COLR**.
3. Press navigation button to scroll through the available colors (RED, GREEN, AMBER).
4. Press menu select button below SEL to select the desired color.